



*"Your Source for Pagers"*



## ***Apollo 924 (AL-924)***

**Alpha-Numeric Display Pager**

# **User Guide**

**WaveWare Technologies, Inc.**

Sales / Customer Service at: **1-800-373-1466**

Tech Support at: **1-800-373-1466 x109**

9726 Skillman St. Dallas TX. 75243

[www.wirelessmessaging.com](http://www.wirelessmessaging.com)



Table of

# CONTENTS

*“Your Source for Pagers”*

Control Buttons .....	1
Features and Functions.....	2- 3
LCD Display .....	4
Function Operation.....	5- 26
Reading a Message .....	5
Locking Message .....	6
Unlocking Message .....	7
Deleting a Message.....	8
Deleting All Messages.....	9
Move Message to Memo .....	10
Setting Alert .....	11
Pager On / Off .....	13
Setting Auto Sleep .....	14
Setting Alarm .....	15
Setting Time And Date .....	16
Setting Scroll .....	17
Setting Zoom In Or Zoom Out .....	18
Reading the Mail Drop .....	19
Moving the Cursor .....	20
Reading the Personal Message.....	21
Reading the Full Message.....	22
Backlight / Duplicate .....	23
Error Message / Battery Gauge .....	24
Set Mail Drop Alert .....	25

WaveWare Technologies, Inc. [www.wirelessmessaging.com](http://www.wirelessmessaging.com)

 
Customer Service: **1-800-373-1466** Tech Support: **x109**



# Control Buttons

*“Your Source for Pagers”*

## Control Buttons

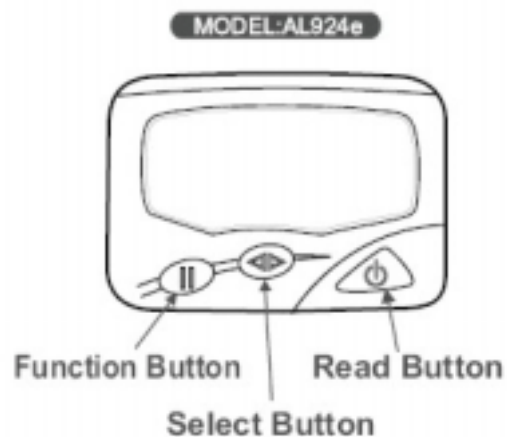

### ⏻ Read Button

- to read message
- to turn on back-light
- to turn on power
- to activate the function

### ▶ Select Button

- to move the cursor
- to read message by cycles

### || Function Button

- to display the function menu
- to adjust the time and date change
- to enable the function mode

WaveWare Technologies, Inc. [www.wirelessmessaging.com](http://www.wirelessmessaging.com)  
 Customer Service: 1-800-373-1466 Tech Support: x109



## Features and Functions

***“Your Source for Pagers”***

- 84 English Alpha Character Memory
- Display Black Light
- 16 Memory Slots + Message Full 10 sets
- Personal Message Memory: 10 sets
- Mail Drop: 10 sets
- Time, Month, Date, Year Display
- User Selectable 12 / 24 Hour Clock
- Message- In Time Indication
- Incomplete Message- In Indication
- Manual On / Off Operation
- Unread Message Indicator
- Duplicate Message Indicator
- Message Lock
- All or Individual Message Delete

WaveWare Technologies, Inc. [www.wirelessmessaging.com](http://www.wirelessmessaging.com)  
Customer Service: **1-800-373-1466** Tech Support: **x109**



## Features and Functions

***“Your Source for Pagers”***

- Reminder Alerts
- Message Full Indication
- Message Full Auto Storage
- Message Auto Storage to Mail Drop (User selectable)
- Display Out Of Service Area
- Display 5 Daily Alarms Sets
- 4 Beep Alerts / Silent Vibration / 8 Musical / Sleep Mode
- Mail Drop Alerts
- Remain in Memory While Re-place Battery

WaveWare Technologies, Inc. [www.wirelessmessaging.com](http://www.wirelessmessaging.com)

 
Customer Service: **1-800-373-1466** Tech Support: **x109**



# LCD Display

*“Your Source for Pagers”*

## LCD Display

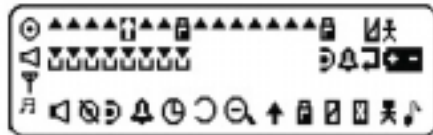

### Pager Status Symbols

- ⊙ POWER ON INDICATOR
- ♪ MUSIC ALERT
- ⚠ BEEP ALERT
- ⌚ AUTO SLEEP INDICATOR
- 🔔 ALARM INDICATOR
- 🔋 AUTO SCROLL INDICATOR
- 🔋 BATTERY CAPACITY
- 📶 OUT OF RANGE INDICATOR
- 📶 ERROR MESSAGE
- 📶 DUPLICATE MESSAGE
- 📶 MAIL DROP MESSAGE
- 📶 MEMO MESSAGE INDICATOR

### Message Status Symbols

- ▲ MESSAGE IN MEMORY
- 📧 MESSAGE SELECTING
- 🔒 MESSAGE LOCK IN MEMORY
- 📧 MESSAGE LOCK SELECTING
- 👤 PERSONAL MESSAGE
- 📧 FULL MESSAGE
- 👤 PERSONAL MESSAGE SELECTING
- 📧 FULL MESSAGE SELECTING
- 📧 MAILDROP IN MEMORY
- 📧 MAILDROP SELECTING

### Function Menu Symbols






- ↑ UP OR ESCAPE
- ⏏ SET ALERT
- 🔕 PAGER OFF
- ⌚ SET AUTO SLEEP
- 🔔 SET ALARM
- 🕒 SET TIME
- 🔄 SET SCROLL
- 🔍 ZOOM IN / ZOOM OUT
- 🔒 MESSAGE LOCK
- 🗑 MESSAGE DELETE
- 🗑 DELETE ALL
- 👤 MOVE TO MEMO
- ♪ MAIL DROP ALERT

 
 
 
 


# Receiving and Reading your Message

*"Your Source for Pagers"*

## Receiving And Reading Your Message

- \* A flashing  symbol indicates you have a message has not been read.(The symbol  of mail drop shows on screen by flashing).
- \* Press  once, to preview the message.
- \* Press  , to display your message.,Press  once, to view the next screen.
- ★ If you have set " Auto Scroll " , your pager will scroll through your message screen by screen automatically .

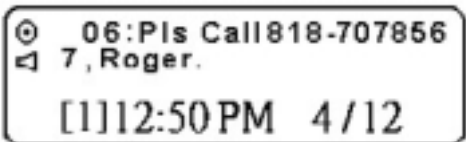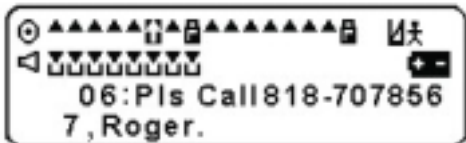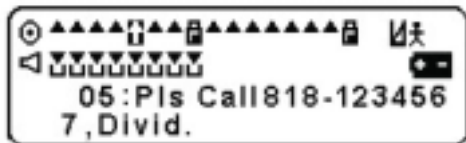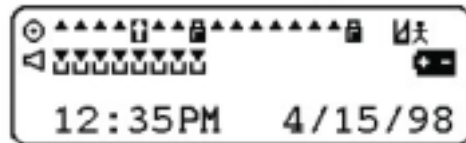





## Locking Messages

*“Your Source for Pagers”*

### Locking Messages

  - \* Press ◀▶, to move the cursor to the desired flashing symbol. [ ] .
- \* Press [ ] , press ◀▶ once to select the desired message to lock.
- \* Press [ ] , to lock the message. .
- \* The symbol [ ] is displayed , indicating the status of the message in memory.

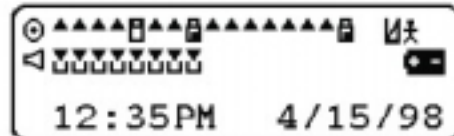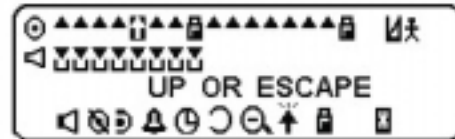







# Unlocking Messages

*"Your Source for Pagers"*

## Unlocking Messages

  - \* Press ◀▶, to move the cursor to select the message to unlock.
- \* Press ||, then , press ◀▶ once, to " MESSAGE UNLOCK " Mode.
- \* Press ||, to unlock the message.

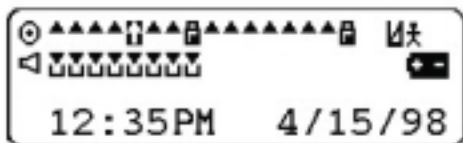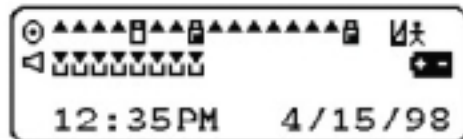



# Deleting Messages

*“Your Source for Pagers”*

## Deleting Messages

- \* Press ◀▶ , to move the cursor to select the message you desire. Press ⏏ to read the message.
- \* Press || , press ◀▶ once , to display " MESSAGE DELETE " Mode.
- \* When " MESSAGE DELETE ? " is displayed on the screen , press || to delete the message.

```

Ⓞ 05:Pls Call818-123456
◀ 7,Divid.
[ ]12:30PM 4/12
  
```

```

Ⓞ 05:Pls Call818-123456
◀ 7,Divid.
MESSAGE DELETE
      ↑  Ⓞ  Ⓞ  Ⓞ
  
```

```

Ⓞ 05:Pls Call818-123456
◀ 7,Divid.
MESSAGE DELETE ?
  
```

```

Ⓞ ▲▲▲▲  Ⓞ▲▲▲▲▲▲▲▲▲▲▲▲  Ⓞ  Ⓞ天
◀ ▼▼▼▼▼▼▼▼▼▼
12:35PM 4/15/98
  
```



 
 
# Deleting ALL Messages

*"Your Source for Pagers"*

## Deleting All Messages

( All unlocked and read messages )

- \* Press **||** , press **◀▶** again , to "DELETE ALL " Mode .
- \* When " DELETE ALL ? " is displayed , Press **||** ,all unlocked and read messages are now deleted.

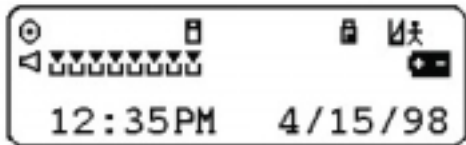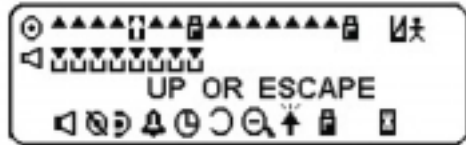












# Setting the Alert

*“Your Source for Pagers”*

## Setting The Alert

   - \* Press **||** , then , press **◀▶** once to display " SET ALERT " Mode .
- \* Press **||** , to enable "SET ALERT".
- \* Press **||** , to move the cursor to the desired alarm mode .( Alert  / Musical  / Vibration  / Sleep  are optional )
- \* Press **◀▶** , to move to the cursor to the desired tone or music .
- \* Press **⏻** setting the alert is completed.

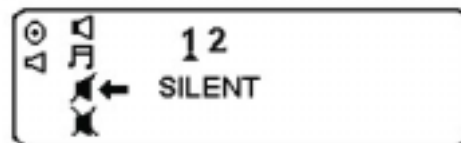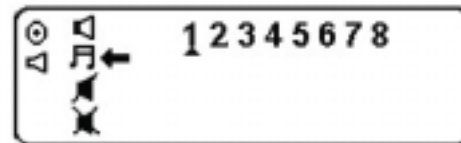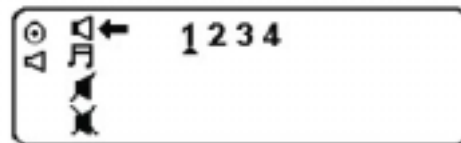





# Setting the Alert

Cont.

*“Your Source for Pagers”*

## Setting The Alert

  - \* The symbol is displayed if the message receiver is in the audible mode .
- \* The symbol won't display on screen if the receiver is in the silent mode or sleep mode.

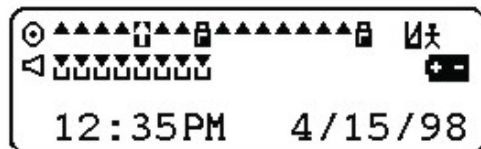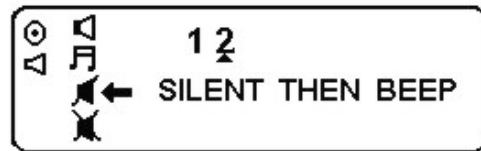





# Turning your Pager OFF

*“Your Source for Pagers”*

## Turning Your Pager Off

  - \* Press **||** , then , press **◀▶** again to " PAGER OFF " mode.
- \* Press **||** , till " PAGER OFF ? " appears on the screen.
- \* Press **◀▶** , to turn the pager off .
- \* After turning your pager off , the screen is empty.
- \* Press **⏻** , to turn the pager power on.

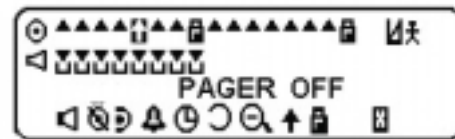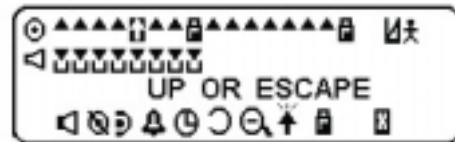






# Setting Auto Sleep

*“Your Source for Pagers”*

## Setting Auto Sleep Mode

   - \* Press **||** , then, press **◀▶** to display " Auto Sleep " mode.
- \* Press **||** , to enable " Auto Sleep Set " Mode.
- \* Press **||** , to select "open" or "close" (symbol **⌚** or **-** ) and adjust the digits, press **◀▶** for moving the cursor.
- \* Press **⏵** setting auto sleep mode is completed. The screen returns to stand-by status.
- \* **⌚** is displayed when the Auto Sleep mode is set.
- \* The enable **zZ** symbol indicates your pager is during setting status.

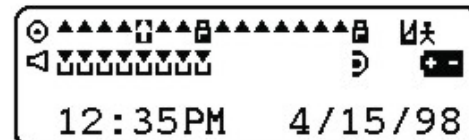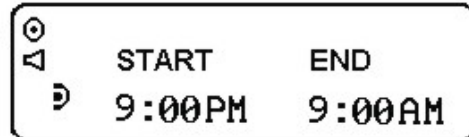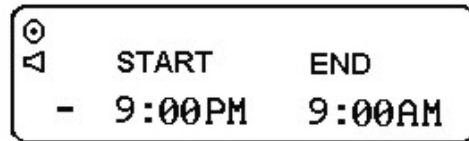









# Setting the Alarm

*“Your Source for Pagers”*

## Setting The Alarm ( 5 alarms )

    - \* Press **||** , then , press **◀▶** to "SET ALARM "Mode.
- \* Press **||** , to enable or disable the alarm.
- \* Press **◀▶** , to move the cursor to set the alarm status either alarm enabled , alarm disabled or set time.
- \* Press **⏵** setting the alarm is completed.

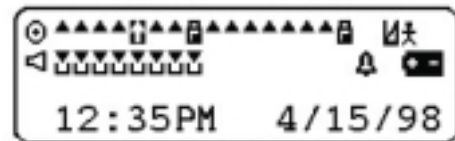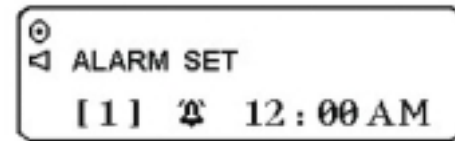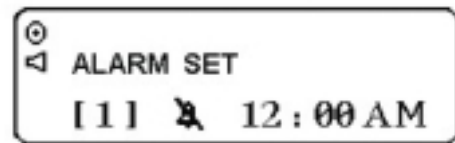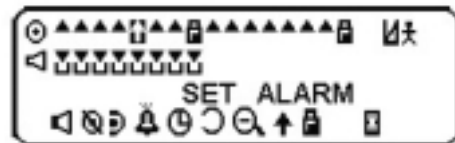







# Setting Time and Date

*“Your Source for Pagers”*

## Setting The Time And Date

    - \* Press **II**, then , press **◀▶** once until "SET TIME " Mode is displayed.
- \* Press **II**, to enable set time. .
- \* Press **◀▶**, to move the cursor to the hour / minute digit .Then , press **II**,
- \* to adjust each set of digits : AM/ PM/24 hr / month / day.
- \* Press **⏵** to activate the time and date change.

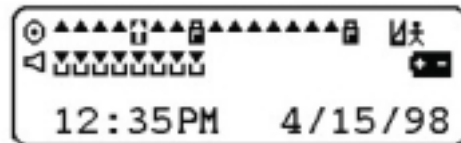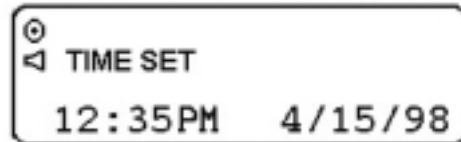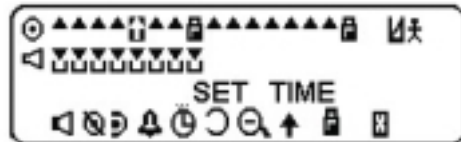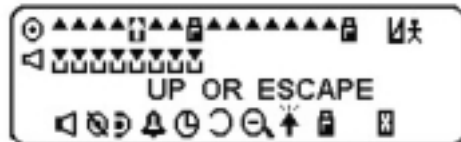






# Setting Scroll

*“Your Source for Pagers”*

## Setting Scroll

   - \* Press **||** , then , press **◀▶** , to " SET SCROLL " Mode .
- \* Press **||** , to enable scroll automatically.
- \* Press **||** , to select the speeding of scroll.
  - (1) **■** -- slow.
  - (2) **■ ■** -- normal.
  - (3) **■ ■ ■** -- rapid.
  - (4) **X** -- off
- \*
- \* Press **◀▶** to activate the function.
- \* When the Auto scroll is set, the **↻** symbol is displayed on screen.

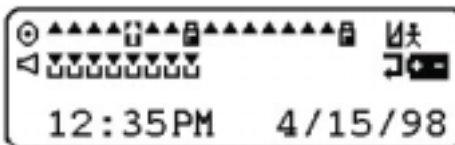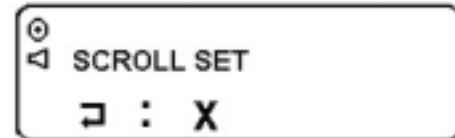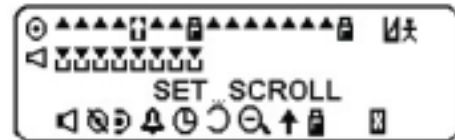








# Setting Zoom

*“Your Source for Pagers”*

## Setting Zoom In / Zoom Out

     - Press **||** ,then press **◀▶**, to "ZOOM IN".(symble **⌕** ), Then, press **||** to confirm..
- The letters on screen enlarge and become two lines to read.
- Or press **◀▶** to move the cursor again to " ZOOM OUT " (symble **⌕** ), and press **||** to complete.
- The letters on screen change to four lines to read.

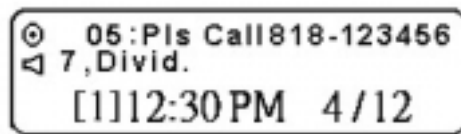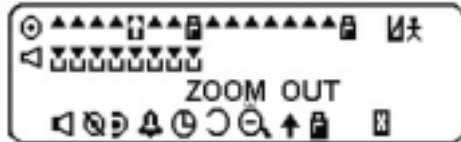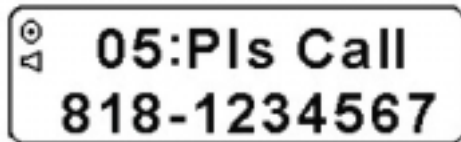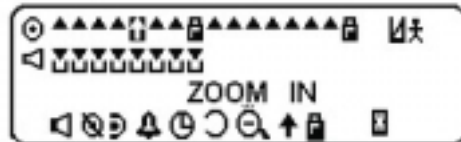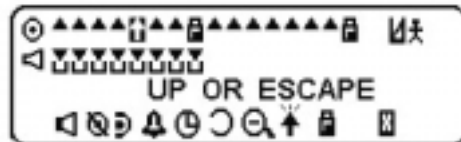





# Reading Mail Drop

*“Your Source for Pagers”*

## Reading Mail Drop

  - \* Press **||** twice , to move the flashing icon in the second row.
- \* Press **⏸** , to read message or press **◀▶** , to move the icon to the desired Mail drop.
- ★ The features allows 15 sets Mail Drop

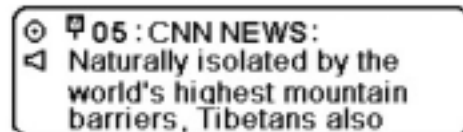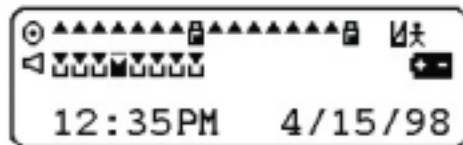








# Reading Personal Message

*“Your Source for Pagers”*

## Reading Personal Message

   - \* Press ◀▶, to move the flashing icon to the 𐀀 symbol.
- \* Press ⏏, to read message.
- \* When the 𐀀 symbol is shown in the top left-hand corner of the display, indicates the message status as a personal message.

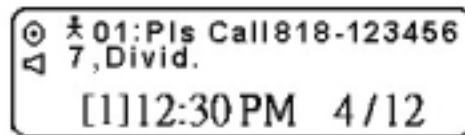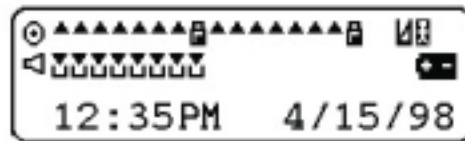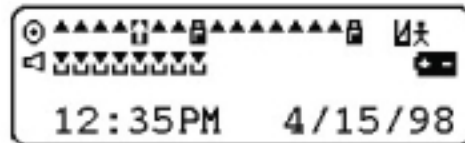






## Reading Full Message

*“Your Source for Pagers”*

### Reading Full Message

   - \* Press ◀▶, to move the flashing icon to the 𐀀 symbol.
- \* Press (I), to read message.
- \* When the 𐀀 symbol is shown in the top left-hand corner of the display, indicates the message status as a full message.

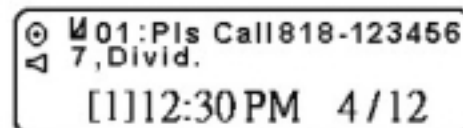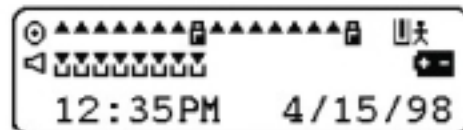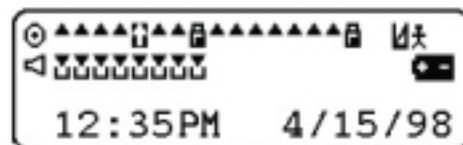






*“Your Source for Pagers”*


## Backlighting and Duplicate Message



### Backlighting

You can manually activate the back-lit at any time by pressing and holding  for three seconds . If no other buttons are pressed, the back-lit automatically turns off when the pager returns to the standby mode .

### Duplicate Message

The pager automatically covers by the latest messages if it is received the same message.

The  symbol is shown in the top left-hand corner of the display , indicates the message status as a "Duplicate Message".

 05:Pls Call 818-123456  
 7, Divid.  
 [1]12:30 PM 4/12

 


*“Your Source for Pagers”*

## Error Message and Battery Gauge



### Error Message

If it is received the error message. The ☒ symbol is shown in the top left-hand corner of the display , indicates the message status as a Error message.

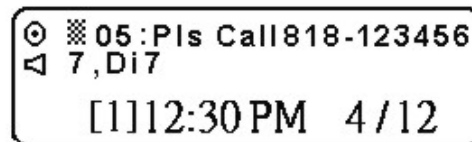

### Battery Gauge

  The battery indicator is located on the status screen and keeps you informed of battery energy level. The three indicators range from ■ (full), ▣ (1/2), □ (low). Whenever the low battery shows on display, Please replace the new battery in to make sure the pager is in receivable condition.

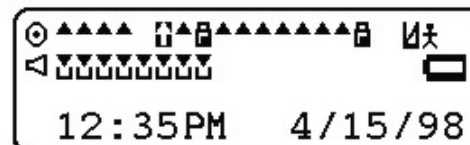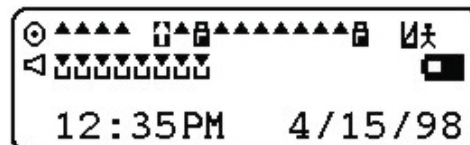



# Set Mail Drop Alert

*“Your Source for Pagers”*

## Set Mail Drop Alert

- \* To move the cursor to the Mail Drop.
- \* Press **||** , to display the function menu.
- \* Press **▶** , to move the cursor to set mail drop alert ( **♪** ).
- \* Press **||** , to activate the function .Or press **⏻** , to exit

