

# USER MANUAL

## NUMERIC DISPLAY PAGER

Models: AL-202/AF-202/AL-500R/AF-500R  
AL-777/AF-777/AL-900/AF-900


### Features and Functions

- ✓ Compact Size
- ✓ 16 Sets of Memories
- ✓ 8 Message Protection
- ✓ 10 Memory Phone Book
- ✓ 3 Alarm Settings
- ✓ Music Call Function
- ✓ 40 Built In Alpha Messages
- ✓ Service Area Indicator
- ✓ Selectable 10 Melodies/ 4 Beep Tones/ Vibration/ Sleep
- ✓ Date and Clock Display
- ✓ Date and Time Stamp
- ✓ Alarm Function
- ✓ Selective Message Delete
- ✓ Delete All
- ✓ Memory Full Indication
- ✓ FM Radio (FM ONLY)

Features

1

### Control Buttons

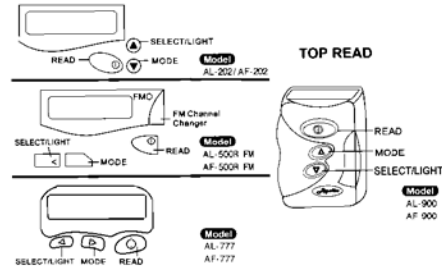

### LCD Display

- su Day of the Week
- 08 Message Number
- Time Set Indicator
- Beep Alert
- Vibrate or Sleep Alert
- Music Alert
- Alarm
- Telephone Directory
- Duplicate Message
- Low Battery Alert
- Message Lock
- Message Continued
- Out of Service Area
- Delete Message
- A.B.C.D Tone Display

LCD Display

3

### POWER ON

Press and release the "READ" button. The pager alerts as it powers up. Now the pager is on standby.

### POWER OFF

Press "MODE" button until OFF appears in the LCD window. Then press the "SELECT" button. When the pager is off, current time and alarm functions work normally. All messages that were received prior to turning the unit off will remain in memory.

### SET ALERT

The pager has 3 standard alert modes. You can select one mode among audio (beep or music), vibration or sleep (no alert) with the "MODE" button while the pager is on.

### AUDIBLE ALERTING

When the pager is initially turned on, it is automatically set to an AUDIO alert. To change this alert to another beep or melody, Press the "MODE" button until SET ALERT? is displayed on the LCD. Press the "SELECT" button once and the pager displays AUDIO? Choices include MUSIC (melodies 1-10 and Beep alerts 1-4). Press the "SELECT" button again and the pager will display the current alert. (Continued)

choice. By pressing the "MODE" button, you can scan the 10 music melodies and 4 beep alerts. Choose the desired alert by pressing the "READ" button.

### VIBRATION and SLEEP ALERTS

VIBRATION will silently alert you while SLEEP alert emits no alert at all. To set, press the right "MODE" button until SET ALERT? is display Press the "SELECT" button once, then the "MODE" button until the pager displays SILENT? on the display for vibration-or SLEEP? for no alert. When you make your selection, press the "READ" button.

### Message MODE

When a message is received, the pager displays 1 PAGE on the LCD and depending on the alert mode selected :

- BEEP Emits a 16 second beep alert
- MUSIC Melody plays twice
- VIBRATION 8 second vibration
- SLEEP No alert.

To stop any alert, press any button

### REMINDER ALERTS

If no button is pressed after a message is received, a reminder alert will emit every 2 minutes (except Sleep mode)

### TO READ A MESSAGE

Press the read button to read a message. If the message is continued, the mark ▶ displays - To continue, press the "READ" button again. Date and time are stamped on each message received.

Message

7

### LCD BACKLIGHT

When needed, a backlight can be activated by pressing the "SELECT" button. The light will automatically shut off in 20 seconds after no activity, or press the "SELECT" button again to turn the light, off.

### LOCKING

Locking a message can help prevent the accidental deletion of a message. Up to 8 messages can be locked at a time. Using the READ button, select message to be locked. Press the right mode button until the lock icon appears at the top of the Then press the left SELECT button. Message has been locked and cannot be deleted unless unlocked.

### DUPLICATE MESSAGE INDICATOR

Messages received more than once will be mated with

### UNLOCKING

To unlock a message, Using the READ button, select message to be unlocked, press the right MODE button once to remove the lock. Message can now be deleted.

Control Buttons

2

SET ALERT

6

## TO ERASE ONE MESSAGE

Using the READ button, select message to be deleted. Press the MODE button until a scissors ✂ icon appears at the top of the LCD. Then press the SELECT button. To delete message.

## TO ERASE ALL

In standby mode while not viewing messages, press the DELETE MODE button until the works "CLEAR ALL?" appears on the display. Press the left SELECT button once. All unlocked messages are deleted.

### NOTE:

The locked messages are not deleted in "CLEAR ALL" mode. To delete all messages in "CLEAR ALL" mode, first make any locked messages unlocked.

## TO SET TIME AND DATE

Press the right read button until "SET TIME?" appears on the LCD.

Press the left SELECT button once.

1. Use the right MODE button to pick the current day-of-the-week. The character letters appear in the top left of the display.

e.g., SU=Sunday MO=Monday etc.

Then Press the left SELECT button once

2. Next, press the right MODE button to choose the Month e.g., 5=May Ju=June etc.

Then Press the left SELECT button once

3. Next, press the right MODE button to choose the day-of-the-Month

## ALARM

The comes with an alarm function that will make the pager alert at a specified time everyday whether the pager is on or off. There are 3 separate alarms that can be set for different times of the day.

### TO TURN ALARM ON/OFF

When the pager is initially turn on, press the right MODE button until "SET ALARM" appears on the LCD.

Press the left SELECT button once to enter alarm mode. To set alarm #1, press left SELECT button again and the word "OFF" will blink. To turn to ON, press right MODE button once.


Press left SELECT button once again then using the right MODE button change the hour of day to the desired number.

Press the left SELECT button once to go to the minutes and using the left MODE button, change the minutes to the desired number. Repeat for A for AM or P for PM.

(Continued)

When Complete, press the READ button. For alarms 2 or 3, after accessing alarm function press the right mode button once more for alarm #1 and again for alarm #3. Set them exactly the same way. Turn off any alarm, while in that alarm mode, change the "ON" to "OFF".

## DIRECTORY

The directory(with the ability to store up to 10 numbers) can be used as an additional memory or as a phone book to store your important numbers. While reading a message, you can imprint a copy of the message into the directory. To do so press the "SELECT" button until a  appears, and press the "MODE" button to imprint a copy into your directory (Please note that the directory can only store 12 digits per memory, and is unable to store alpha-numeric messages). To access your memory, press the "SELECT" button until "DIRECTORY" appears on the screen and press "MODE" button. Use the "READ" button to read through all your directory message. Messages stored in the directory can also be lock/unlock and individually erased.

## FM RADIO OPERATION FEATURES

(※ FM Only)

To utilize your FM radio, simply insert the earphones into the slot provided. Once the red light is illuminated you can start tuning the radio to desired station. The radio tuner has auto scan capabilities; therefore it will automatically search for any available station. Unplugging your earphone will automatically turn off your radio.

The FM radio function and the paging function are operated on 2 separate bandwidths; therefore utilizing one will not cause interference to the other.

Please note using the FM radio will dramatically decrease battery life; therefore for best paging reception please always change your battery whenever the low-battery indicator appears.

**CALL Phrase Message:** When your friend pages you, they can add "00" -- "#3" (any choice), to select Phrase message.

 
- |                  |                  |                   |
|------------------|------------------|-------------------|
| 00. C-U-LATER    | 14. HURRY UP     | 28. HAVE LUNCH ?  |
| 01. TURN ON CELL | 15. WAITING 4-U  | 29. HAVE DINNER ? |
| 02. HAPPY B-DAY  | 16. EMERGENCY    | 30. WANNA GO EAT  |
| 03. COME HOME    | 17. MEET AT CAFE | 31. WANNA HANG ?  |
| 04. CALL HOME    | 18. MOVIES       | 32. YES           |
| 05. DO NOT 4-GET | 19. ARCADE       | 33. NO            |
| 06. GOOD NIGHT   | 20. MALL         | 34. MAY BE        |
| 07. HELLO        | 21. PLAY B-BALL  | 35. CLUBBING      |
| 08. HOW ARE YOU? | 22. PLAY Q-BALL  | 36. MEETING       |
| 09. I LOVE YOU   | 23. PLAY CARDS   | 37. SO COOL       |
| 10. I NEED YOU   | 24. GO BOWLING   | 38. HI BABY       |
| 11. I MISS YOU   | 25. GO CRUISING  | 39. I DINNO       |
| 12. NEED HELP    | 26. GO SHOPPING  |                   |
| 13. NEED INFO    | 27. GO SWIMMING  |                   |

\* Capable of linking up to 4 phrases

### EXAMPLE :

- > Dial pager number 91234567 and wait for the connected tone .
  - > Press "\*" once. Then press "#09" and a number you wish the person to call back e.g. "1234567"
  - > Press "\*" twice to end call.
- Then the pager will display as below
- > The pager will first display "I LOVE YOU".
  - > Secondly the pager will show "1234567".
  - > Lastly the pager will display the telephone number that you are dialing from in brackets (Caller ID) "1234567"

### Battery Information :

1. This pager uses only AAA Alkaline batteries. Do not use "Heavy Duty" batteries or rechargeable batteries .
2. When battery is low, Lo-BATTERY and low battery icon  will be shown on display. To remove the old battery , simply just slide the battery door to the right to open . Align the new battery so the positive (+) and negative (-) markings are in proper position , and insert the new battery . Then press the On button to make sure the pager is in usable condition .