

NEC EXEC MESSAGEMAKER

FEATURES:

Cap Code Retrieval - Turn pager off. Push function button and release, cap code should appear on screen. Push function button and release again and frequency should appear on the screen.

Message indicator - The message assigned the number "1" is always the most recent message received. If there are additional messages in memory, their assigned number is incremented by one to indicate their position in memory. The message number indicator is smaller than the message character and located to the left side of the message.

Duplicate Message indicator - The duplicate message indicator will appear on the display when a duplicate message has been received. When this occurs, the incoming message is ignored and the duplicate message in memory moves to the beginning of the memory queue and is assigned message number 1 indicating it is the most recent message received.

Clock indicator - The current time will be displayed when your pager is turned on and in the standby mode.

Time Stamp - Each message will display the time it was received on either the 2nd or 3rd screen depending on the message length.

Low Voltage Indicator - When the pager detects low battery voltage, the message "LO BATT" is displayed and an alert tone will sound. Press the function button to reset the display and alert tone. The battery should be replaced as soon as possible.

Alert options - You have the option of selecting 1 of the 4 following alerts in your pager. The alerts will sound or vibrate any time the pager is turned on or when a message is received.

bEEP 1 - Beep Tone

bEEP 2 - Musical Tone

bEEP 3 - 2 Short Tones and Vibrating Alert

----- - Vibrating Alert

OPERATIONS:

Turning Your Pager On

- a. Slide the switch on the side of the pager down.
- b. Your pager will display all screen segments and your current alert will sound or vibrate.
- c. The display will automatically reset to the standby clock display.

Turning Your Pager Off

- a. Slide the switch on the side of the pager up and the pager will be turned off.

Setting Your Message Alerts

- a. You can set your pager to alert you with one of 4 alerts

bEEP 1 - Beep Tone

bEEP 2 - Musical Tone

bEEP 3 - 2 Short Tones and Vibrating Alert

----- - Vibrating Alert

- b. Press the bottom button until the message "SET 1" appears with the current alert flashing.
- c. Press the top button to display your current alert option.
- d. Press and release the bottom to step through the different alert options. When your desired alert is displayed, press the top button to select it.

Musical Alert Setting

- e. If you select beep 2 option, you can select one of the 4 musical tones.
- f. To choose one of the four different musical tones, press the bottom button. One of the 4 musical tones will sound with each press of the bottom button.
- g. To select your musical alert press the top button.

RECEIVING MESSAGES

- a. When your pager receives a message, it will alert you with either a tone or will vibrate, depending on which alert option you have selected. Press either of the two front buttons and this will reset the pager's alert. Your message will be displayed.
- b. A time telling you the time the message was received is displayed in the bottom left corner 2 seconds after the message is displayed.
- c. If your message is more than 12 digits long the message continued indicator will be displayed in the bottom right corner of the screen. Press and release the top button once more to view the rest of the message.
- d. If you do not reset the alert when receiving a message "CALL" will be displayed. This indicates that you have unread messages in memory.
- e. Follow steps a - c to read messages.

READING STORED MESSAGES

- a. To display a message in memory press and release the top button. The most recent message received will be displayed.
- b. In 2 seconds the time stamp will display the time the message was received.
- c. Continue to press and release the top button to read the messages stored in memory. When all message in memory have been read, the clock will be displayed.

Note: If there are no messages in memory "NO INFO" will be displayed.

SETTING THE CLOCK

- a. Press the bottom button until the message "SET 3" and the flashing time is displayed.
- b. Press the top button and the "12H 24H" will be displayed with the current selection flashing. To change the 12H clock and the 24H clock selection press and release the bottom button until the desired selection is flashing.

- c. Press the top function button and the time will be displayed with the hour flashing.
- d. Press and release (or press and hold) the bottom button until the desired hour is displayed.
- e. Press the top button and the minutes will start flashing. Press and release (or press and hold) the bottom button until the desired minute is displayed. Press the top button once more and both hours and minutes will start flashing. If the time is correct press the top button to exit the time adjust mode. If the time is incorrect press the bottom button and the hour will begin flashing again. Repeat the same steps to reset the time.

SETTING THE CLOCK ALARM

- a. You can set your pager alarm to alert you at a specified time. To set the alarm, press bottom button until "SET 2" is displayed.
- b. Press the top button "ON" and "OFF" is displayed with the current selection flashing. If "Off" is flashing, press the bottom button to change the selection to "ON".
- c. Press the top button to turn on the alarm and the hour digit will start flashing. Press and release (or press and hold) the bottom button to set the hour.
- d. Press the top button to select the hour and the minutes will begin flashing. Press and release (or press and hold) the bottom button to set the minutes. Press the top button to select the minutes.
- e. Both the hour and minutes will begin flashing. If the alarm time is correct press the top button. If the alarm time is incorrect press the bottom button and the hour will begin flashing again. Follow the same steps above to reset the alarm time.

PROTECTING AND DELETING MESSAGES

Protecting Messages

- a. Press the top button to display the message to be protected.
- b. Press the bottom button and "Protect" will be displayed.
- c. Press the top button and the message will be protected in memory. The key symbol will be displayed when viewing the message.

DELETING MESSAGES

- a. Press the top button to display the message you want to delete.
- b. Press the bottom button twice and "delete" will be displayed.
- c. Press the top button and "deleted" will now be displayed. The message is now deleted from memory.