

Battery Door Lock

- Slide the Battery Door Lock in the opposite direction of the arrow to open.
- Slide the Battery Door Lock in the direction of the arrow to Lock.

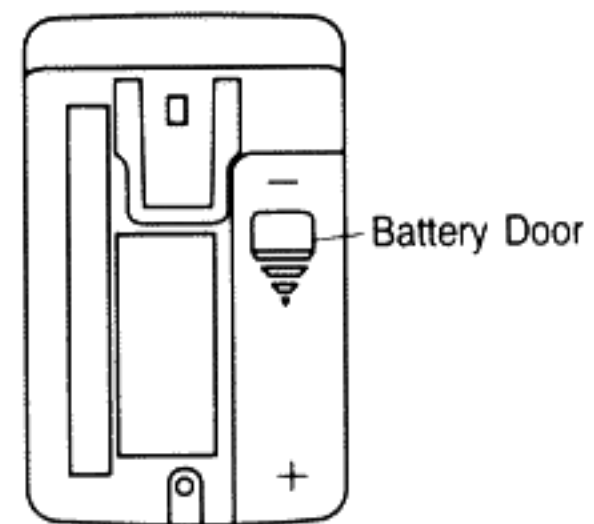


Figure B (View of Back of Pager)

Battery Door

- Slide Battery Door in the direction of the arrow to remove.
- Slide Battery Door in the opposite direction of the arrow to re-install.
- Install battery in the proper polarity position as indicated in the diagram.

This device complies with part 15 of the FCC rules and regulations. Operation is subject to the conditions that the device does not cause harmful interference.

will appear at the end of the message indicating the message is subject to errors.

- If there is one unread message in memory "CALL" will appear on the display. If there are more than one unread message in memory "CALLS" will be displayed.
- In order to read the Time of Day at night or low light environments, press and hold the Menu Key for 2 seconds, when the time begins to flash release the button.


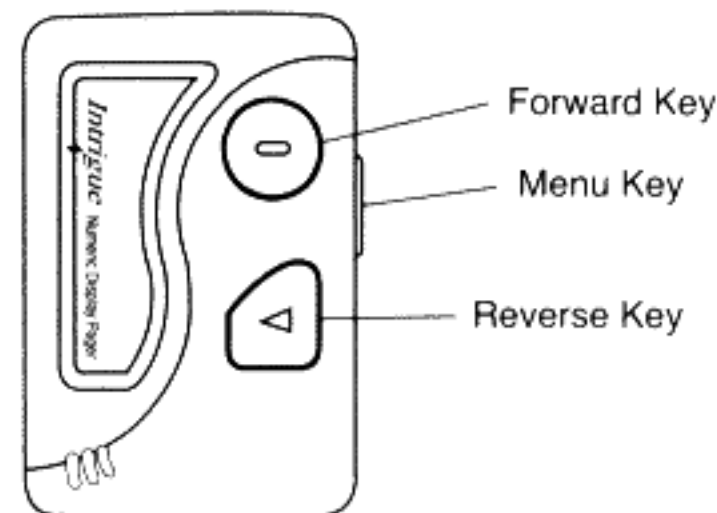


Figure A

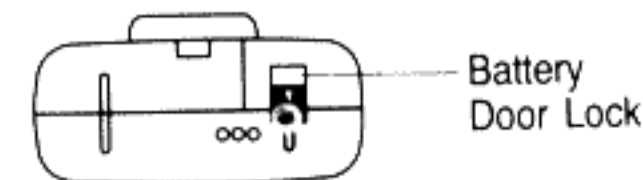

Turning Your Pager Off:

- From the standby mode, press and hold the Menu Key for 2-seconds. When the display screen begins to flash, release the Menu Key and quickly press it again. Your pager will confirm that it is turning off by telling you "bye-bye".

Battery Information:

- Your pager is designed to operate with a "AAA" size alkaline battery. We recommended **Energizer** brand batteries #E92, size "AAA". See Figure B for battery replacement and polarity information. Be sure to turn your pager off before removing the battery to ensure the current time and date is saved in memory.

Other Pager Features:

- When the battery is approaching the end of its life, a low battery alert occurs with "LO CELL" appearing on the display.
- If the number of received messages equals the maximum allowable number, "INFO FULL" will appear on the display. When the memory is full, a new incoming message will overwrite the oldest unprotected message.
- When your pager receives a call with no message associated, "TONE ONLY" will appear on the display.
- If an incomplete or error message is received "--"

If the alarm is turned on, it will activate even if the pager is turned off.


Turning the Time Stamp On and Off:

- From the standby mode, press and release the Menu Key to enter the menu mode. Press the Forward Key until "STAMP SET" is displayed. Press the Menu Key again to select this option. Press the Forward Key or Reverse Key to change between "STAMP ON" or "STAMP OFF", press the Menu Key to select OFF or ON and return to standby mode.


Canned Message Operation:






- Your pager is capable of displaying nine preprogrammed alpha-numeric messages. The codes to activate these messages should be given only to people who page you frequently.
- To send canned messages: Dial your pager in the normal manner, then enter only the 3 digit Code No. from the chart below. End your call in the normal manner.

Code No.	Message	Code No.	Message
110	CALL HOME URGENT	115	I MISS YOU
111	CALL HOME NOT URGENT	116	SWEET DREAMS
112	CALL OFFICE URGENT	118	CALL BOSS URGENT
113	CALL OFFICE NOT URGENT	119	CALL BOSS NOT URGENT
114	I LOVE YOU		

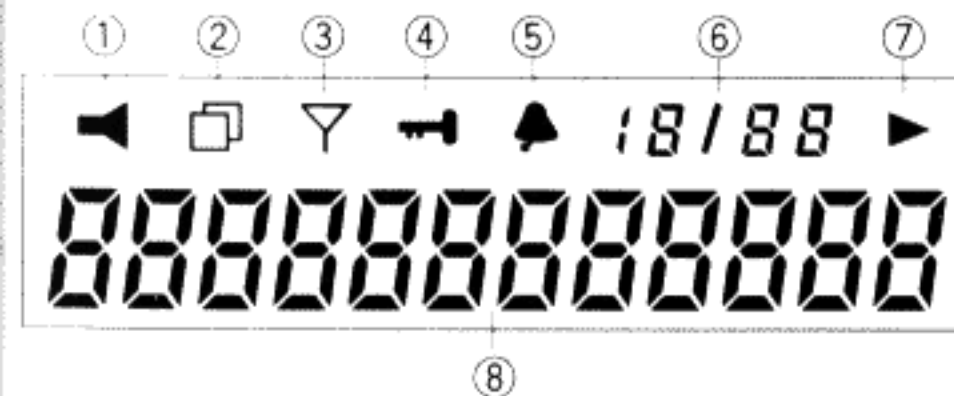
the Menu Key again to select this option. The display will show either "ALARM ON" or "ALARM OFF". Press the Forward Key or the Reverse Key to change the display from "OFF to ON" or from "ON to OFF". By pressing the MENU Key at the "ALARM OFF", the alarm will be turned off and the pager will return to the standby mode. By pressing the Menu Key at the "ALARM ON", the alarm will be turned on and the pager will advance to the Alarm Set Mode. Press the Forward Key or Reverse Key to change to the correct hour setting and press the Menu Key to select. Press the Forward Key or Reverse Key to change to the correct minutes setting and press the Menu Key to select. Press the Forward Key or Reverse Key to change and between A.M. or P.M., and press the Menu Key to select. After selecting the correct A.M. or P.M., the pager will go back to the standby mode. NOTE: The  symbol will appear in the display to designate that the "ALARM" is on. At the programmed time, the alarm will activate and "ALARM" will appear on the display. Press any button to stop the alarm. Your pager has a built in "Snooze Feature". If the alarm is not manually turned off by pressing any button, the alarm will stop in approximately 30 seconds; but it will sound again after 3 minutes. If still not manually turned off by pressing any button, the alarm will stop but again reactivate in 3 minutes. This "Snooze Feature" will repeat for 3 cycles each being 3 minutes apart.

LCD DISPLAY:



- 1. Alert Mode Indicator:**
The  symbol indicates that the pager is in the "Beep" mode.
- 2. Duplicate Message Indicator:**
The  symbol indicates the incoming message received is a duplicate of an unprotected message currently in memory.
- 3. Out of Range Indicator:**
The  symbol indicates that your pager has not received any paging signal in over 30 minutes (not available on all Paging Systems).
- 4. Saved Message Indicator:**
The  symbol indicates that the message is saved in a unique "permanent" memory.
- 5. Alarm Indicator:**
The  symbol indicates that the alarm is on and will beep at the designated time.

- 6. Message Number Indicator-OR-Date Stamp Indicator:**
In the "stand-by mode" (see Turning Your Pager On) the *18/88* symbol indicates the number of unprotected messages stored in memory. When viewing a particular message, the *18/88* symbol indicates the date the message was received. *NOTE: The Date Stamp feature will only be visible when "Time Stamp" is selected from the pager menu (see Turning the Time Stamp On and Off).

- 7. Continued Message Indicator:**
The  symbol indicates that the received message is longer than 12 characters.
- 8. 12 Character, 7 Segment Display:**
The *888888888888* characters are used to display ALL messages and menus.

Key Names: (see figure A.)


- Menu Key Used to enter all menus, and select desired menu options (similar to pressing "enter" on a computer menu)
- Forward Key Used to scroll forward through messages and menu items.
- Reverse Key Used to scroll in reverse through messages and menu items.

Turning Your Pager On:

- Press and hold the Menu Button for 2-seconds. Your pager will emit a start up alert and display your Paging Carriers Customer Service Phone

Number (this feature may not be active in all pagers). After this turn on message, your pager will display the Time of Day and the Date. Your pager is now in the "standby mode" and ready to receive messages.


Receiving and Reading Messages:

- Your pager can receive up to twelve 20-character messages. In addition to these twelve, your pager can store six 20-character messages in a unique "permanent" memory. When a message is received, your pager will automatically display that message and alert for 10 seconds.
- Press the Forward Key to stop the alert and display "CALL". Press the Forward Key a second time to display the message. NOTE: if the "STAMP" feature is on, the message will be preceded by the message time stamp information. Press the Forward Key again to continue reading your messages. Messages that exceed twelve characters are continued on the next screen. An  symbol will be displayed indicating your message exceeded twelve characters. NOTE: pressing the Reverse Key will allow you to scroll your messages in reverse order.

Protecting Messages:

- While viewing a message, press and release the Menu Key causing "STORE?" to be displayed. Press the Menu Key again to select this feature. Your

pager will now display "STORE 1". NOTE: if location 1 is currently occupied, "REPLACE 1" will be displayed. Use the Forward Key or the Reverse Key to scroll through the six memory locations and return to standby option. Press Menu again to store your message in the desired memory location 1 through 6, or return to standby.

Protected messages are designated by  and cannot be overwritten by new incoming messages or lost while replacing the battery. When all six memory locations are full, any new messages you wish to protect must overwrite one of the currently protected messages. NOTE: "TONE ONLY" messages cannot be protected.

Clearing Unprotected Messages(All):

- From the "standby mode", press and release the Menu button to enter the Menu mode. Press the Forward Key until "CLEAR ALL?" is displayed. Press the Menu Key again to select this option. The display will begin to flash "CLEAR ALL?", prompting you to be sure of your choice. If you are sure that you want to delete all messages press the Menu Key again and all messages will be deleted. If you do not want to delete all messages, press the Forward Key or Reverse Key or simply allow the Menu to time out in approximately 8-seconds. NOTE: messages in protected memory can only be overwritten by new messages or individually deleted.

Clearing Unprotected/Protected Messages(Individual):

- While viewing a message, press and release the Menu Key to enter the menu mode. Press the Forward Key until "CLEAR?" is displayed. Press the Menu Key again to select this option. The display will begin to flash between "CLEAR?" and the message, prompting you to be sure of your choice. If you are sure that you want to delete the message press the Menu Key again and the message will be deleted. If you do not want to delete the message, press the Forward Key or Reverse Key or simply allow the Menu to time out in approximately 8-seconds. NOTE: messages in protected memory can only be overwritten by new messages or individually deleted.

Selecting Alert Modes:

- You can select between 5-audible alert tones, or between silent alert and vibrating alert. From the standby mode, press and release the Menu Key to enter the menu mode. Press the Forward Key until "ALERT SET" is displayed. Press the Menu Key again to select this option. Press the Forward Key to sample the different alerts until you find the alert mode desired, then press the Menu Key to select the mode.

Setting the Clock:

- From the standby mode, press and release the Menu Key to enter the menu mode. Press the Forward Key until "DATE SET" is displayed. Press the Menu-Key again to select this option. The display will now show "MONTH" with the number flashing. Press the Forward Key or Reverse Key until the correct month is displayed and press the Menu Key to select. The display will now show "DAY" with the number flashing. Press the Forward Key or Reverse Key until the correct day is displayed and press the Menu Key to select. After selecting the correct Month and Day, the pager will go back to the standby Mode.

ard Key until "TIME SET" is displayed. Press the Menu Key again to select this option. Press the Forward Key or Reverse Key to change to the correct hour setting and press the Menu Key to select. Press the Forward Key or Reverse Key to change to the correct minutes setting and press the Menu Key to select. Press the Forward Key or Reverse Key to change between A.M. or P.M., and press the Menu Key to select. After selecting the correct A.M. or P.M., the pager will go back to the standby mode.

Setting the Date:

- From the standby mode, press and release the Menu Key to enter the menu mode. Press the Forward Key until "DATE SET" is displayed. Press the Menu-Key again to select this option. The display will now show "MONTH" with the number flashing. Press the Forward Key or Reverse Key until the correct month is displayed and press the Menu Key to select. The display will now show "DAY" with the number flashing. Press the Forward Key or Reverse Key until the correct day is displayed and press the Menu Key to select. After selecting the correct Month and Day, the pager will go back to the standby Mode.

Setting the Alarm:

- From the standby mode, press and release the Menu Key to enter the menu mode. Press the Forward Key until "ALARM SET" is displayed. Press