

USER MANUAL

Raphael





1. Features

1. Features



- 50 ~60 days battery life.
- Current time display (12 hour time)
- 16 message storage (20 Characters per message)
- Alarm
- Duplicated message indicator
- Low battery level indicator
- In service area indicator
- Unread message indicator

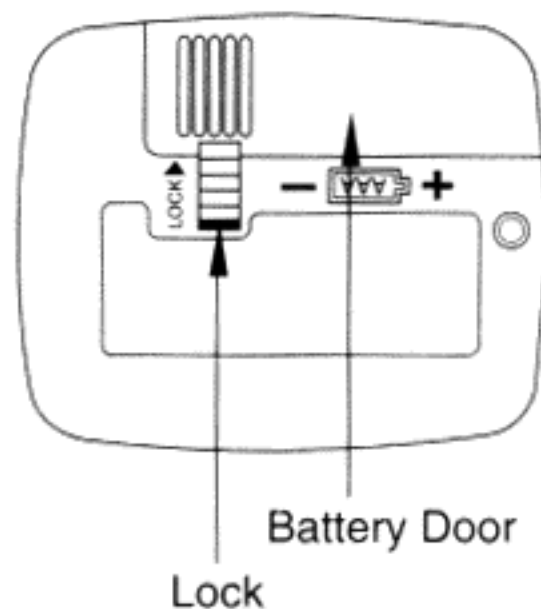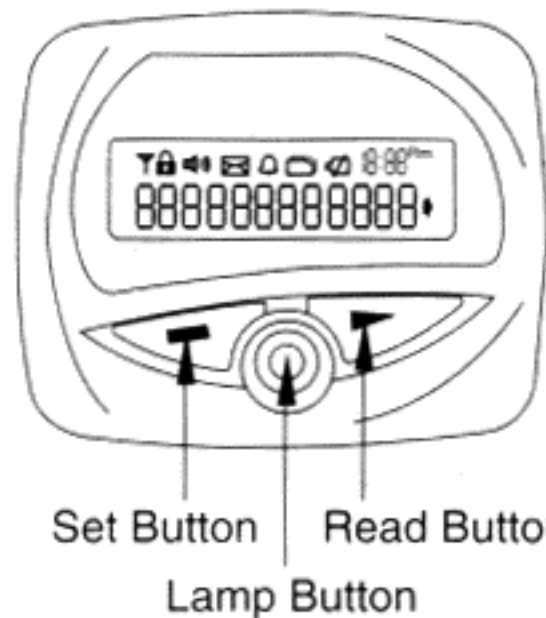2. External View



3. Power On/Off

1. Power On

Press the Set button() or the Read button () for more than 2 seconds, LCD displays the Power-up screen and generates the power-up alert for 3 seconds as shown figure 1. Following the Power-up screen, the display changes to the standby screen as shown figure 2.


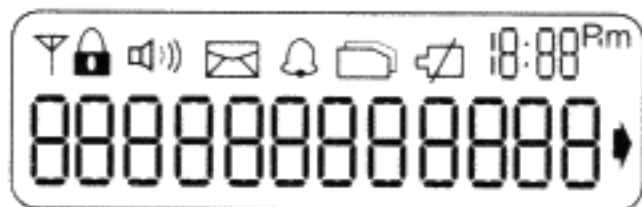


Figure 1


Figure 2 —

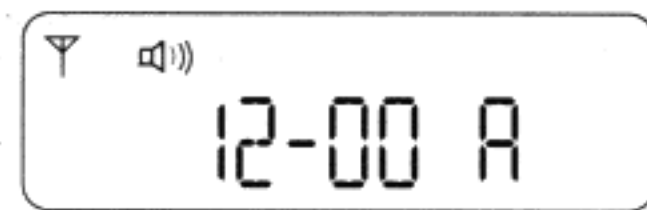


(Standby status)


2. Power Off


Figure 3 —

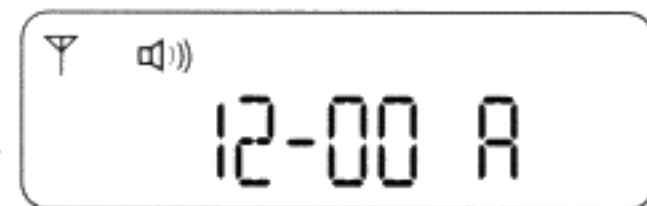



(Standby status)

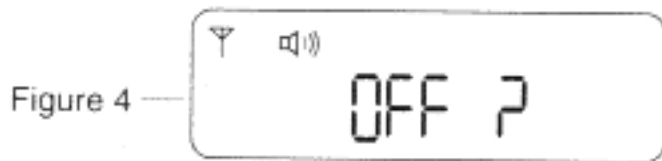When the Set button () is pressed 3 times, power off screen is displayed on the LCD.




Press the Read button (), the screen changed to Power Off screen.



Press the Set button () or Read button () for more than 2 seconds, the display changes to the standby screen.

3. Standby Status

The following figures display standby status in audible alert mode and vibration mode.

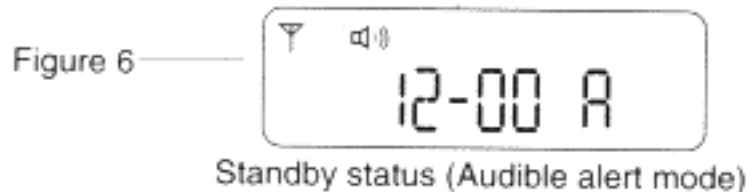

* Hyphen " — " between hour and minute blinks every 0.5 seconds.

4. Display

1. In service area indicator


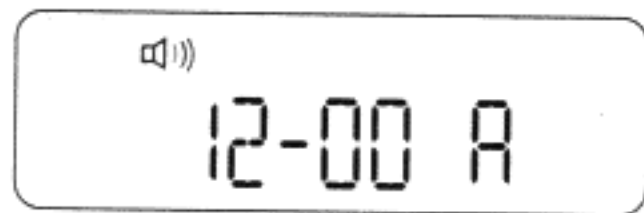
When the pager is in the unreceived area for more than 4 minutes, In service area indicator “” disappears. The pager can not receive any message.


Figure 8



2. Low battery level indicator

While the battery power nears the low level, the screen displays “Lo Lo Lo Lo”. At this time, Replace your battery.


Figure 9

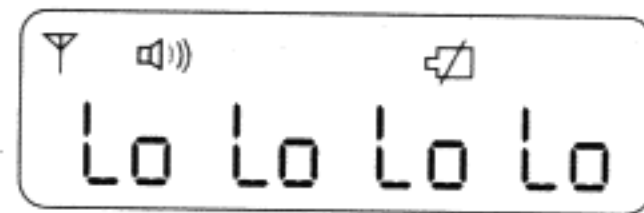


5. Alert Mode


1. From audible alert to vibration

Figure 10

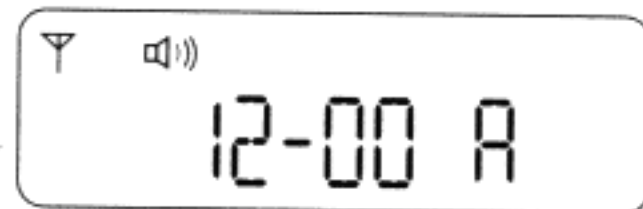


(Standby status - Audible alert mode)

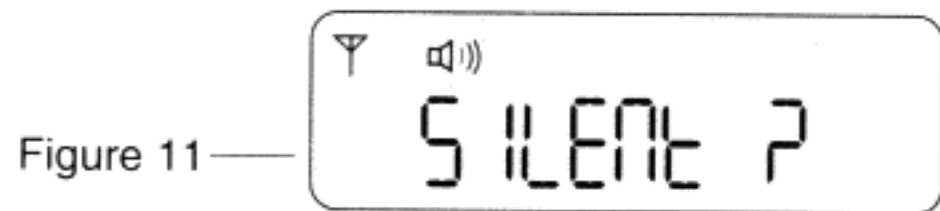

Press the Set button (), the screen displays as shown figure11.

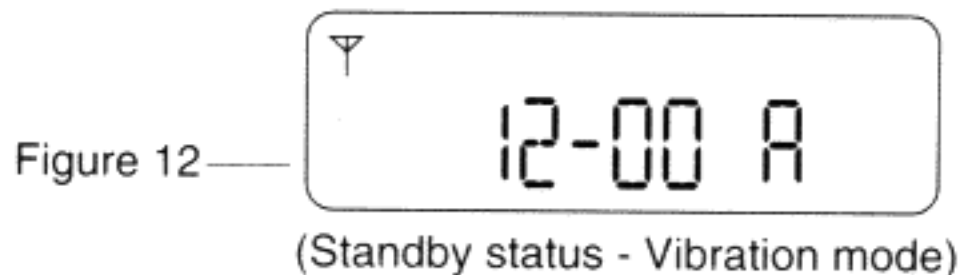


Press the Read button(), the display changes to vibration mode.



2. From vibration to audible mode

Press the Set button (), the display changes to set tone screen. Press Read button() repeatedly, the display changes to figure 15,16,17 and 18.

By pressing Set button(), one of four alert tones can be selected.

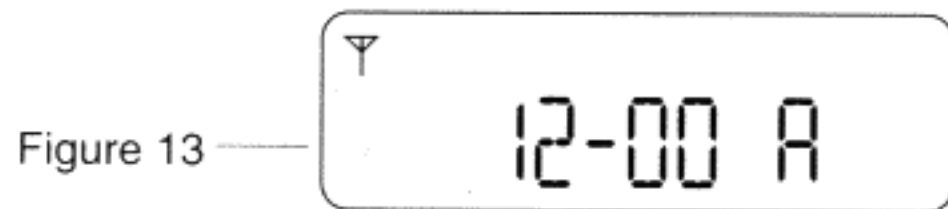


Figure 14

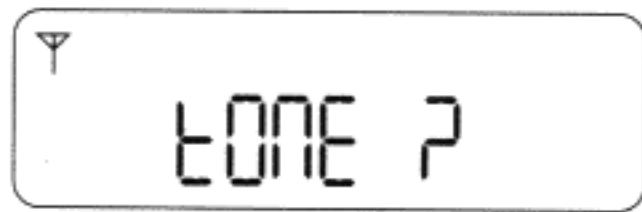


Figure 15

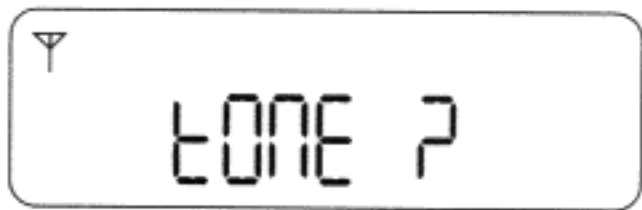


Figure 16

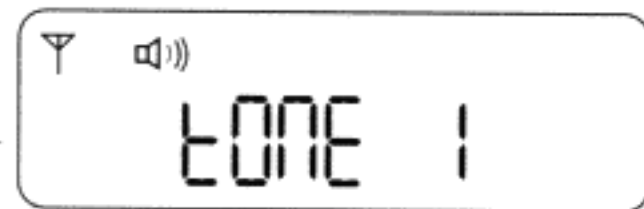


Figure 17


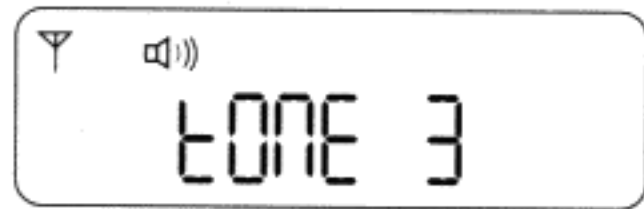


Figure 18




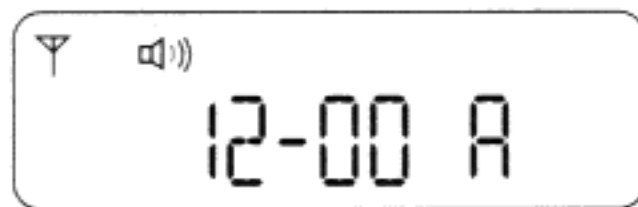
Press the Set button (), the screen returns to the standby status.

Figure 19

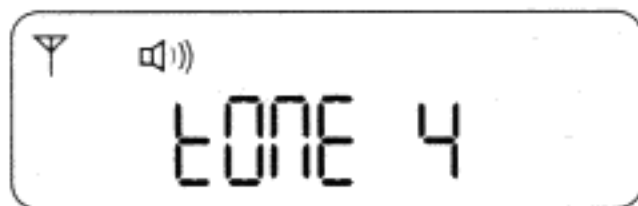

3. Message Lock and Unlock

Messages can be locked up to 12, so they will not be accidentally erased. When locked messages are maximum, the screen displays as shown figure 20.

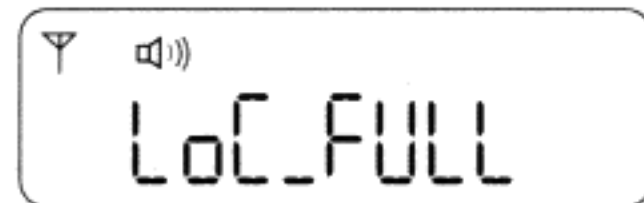


Figure 20

3.1 Lock Message




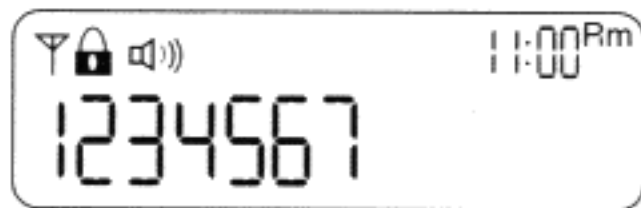
Choose message to protect and press the Set button () while pressing the Read button (), Message lock indicator () displays and messages will be locked.

Figure 21



3.2 Unlock Message





Press the Read button () while pressing the Set button (), messages will be unlocked.

Figure 22



3.3 Delete Message

Figure 23

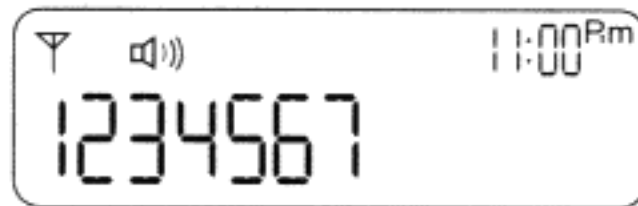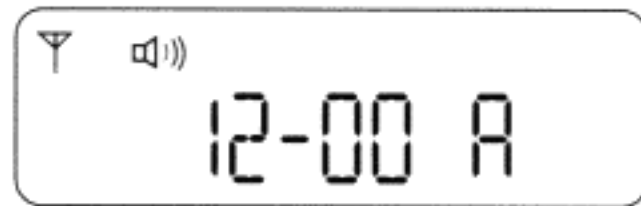


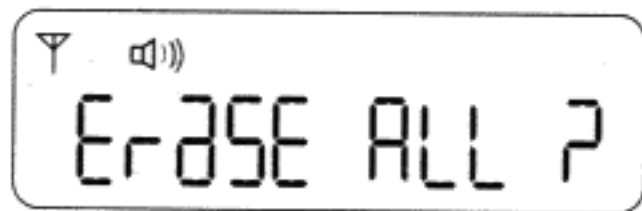
When the Set button () is pressed 4 times, screen displays as shown figure 24.

Figure 24




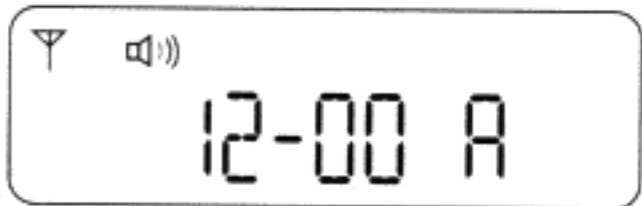
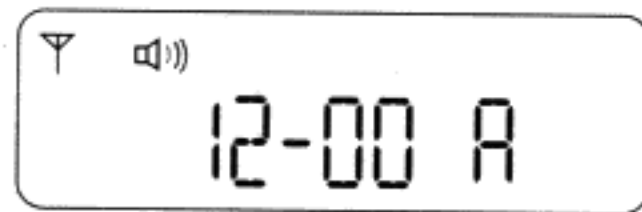
Press the Read button (), messages are erased and the pager returns to the standby status.

Figure 25



4. Set Alarm

Figure 26



■ Set Alarm


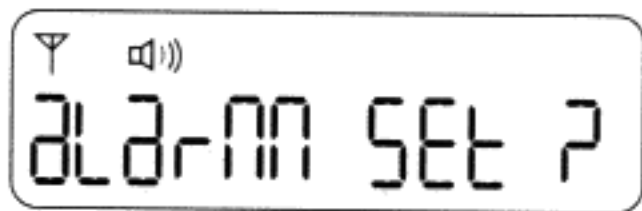
When the Set button () is pressed 2 times, the screen displays as shown figure 27.

Figure 27










When the Read button () is pressed, the screen displays alarm indicator () and hour is blinking as shown figure 28.


Figure 28

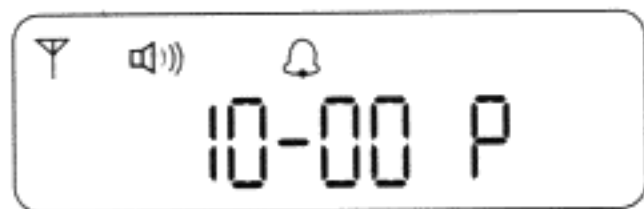

When desired time is displayed, press the Read button (). The 10 minute is blinking when the Set button () is pressed after setting the hour. Press the Read button () to set the 10 minute first. Repeat to set 1 minute and AM/PM. When alarm setting is finished, Press the Set button (), the screen returns to the standby status.


After eight seconds of no pager activity, the screen returns to the standby status.


Figure 29

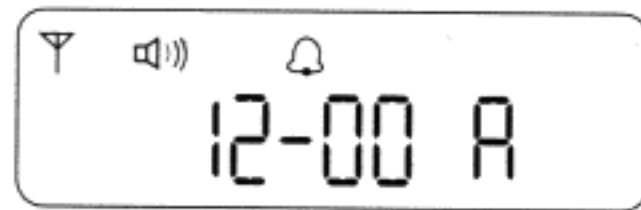



■ Inactivate alarm


Figure 30

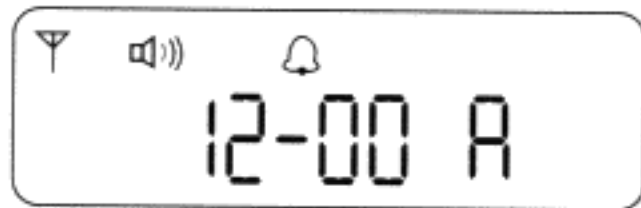


Press the Set button () twice, the screen displays as shown figure 31.

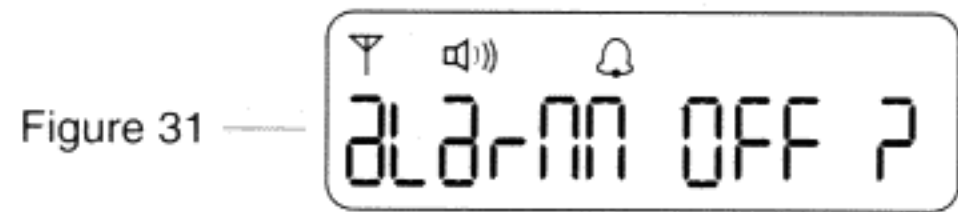


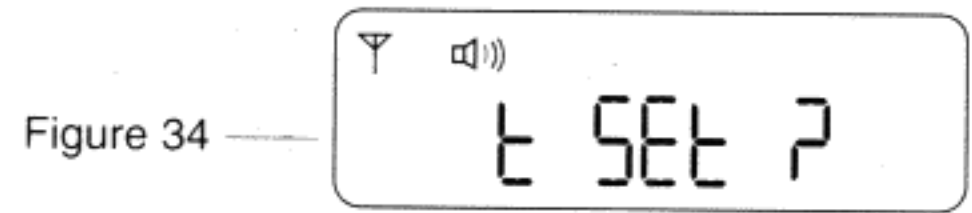
Press the Read button (), The alarm is inactivated and the screen returns to the standby status.

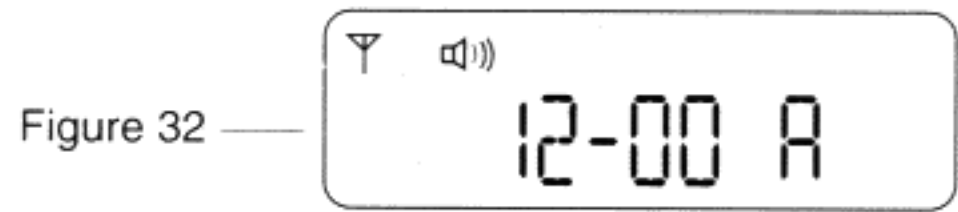

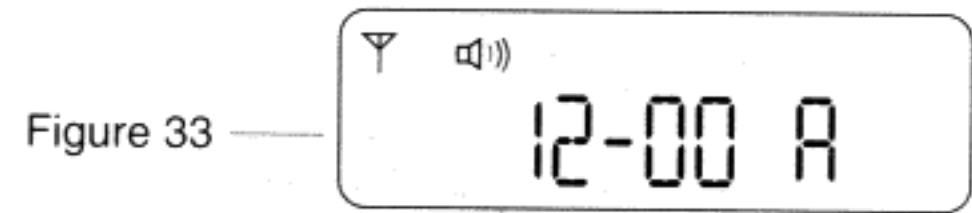


5. Set Time






When the Set button () is pressed 5 times, the screen displays as shown figure 34.

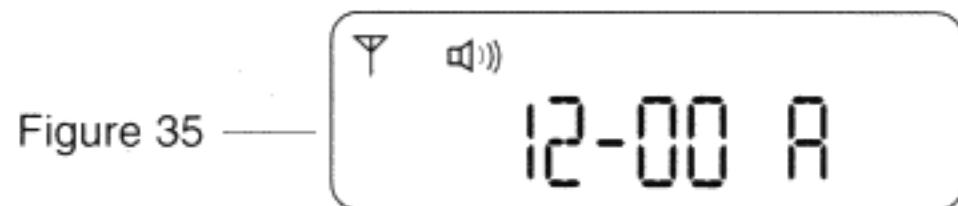

When the Read button() is pressed, the screen displays as shown figure 35 and the hour is blinking. Set current hour by pressing the Read button ().



The 10 minute is blinking when the Set button () is pressed after setting the hour. Press the Read button() to set the 10 minute first. Repeat to set 1 minute and AM/PM. When alarm setting is finished, Press Set button (), the screen returns to the standby status.

6. Other Function

When only lamp button is pressed, lamp is ON.


6. Read Message

1. Receive Message

When a message is arrived, the pager either vibrate or beeps and the message is displayed on the LCD.




Figure 37

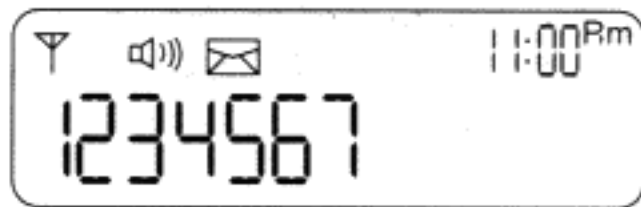

(Standby status - Audible alert mode)


If there is any message that has not been read, the screen displays the number of unread message.

Figure 38

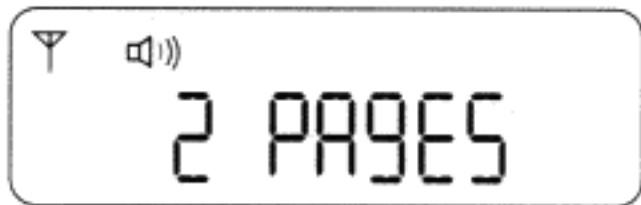


If the message is exceeding 13 characters, the screen displays the Message Continued indicator " ↵ " on the right side of the LCD.

Figure 39

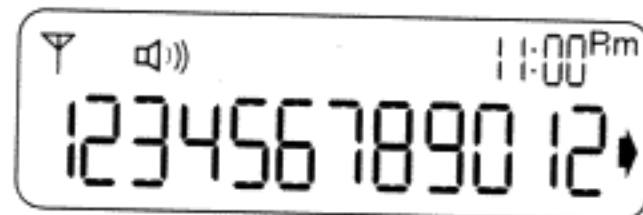


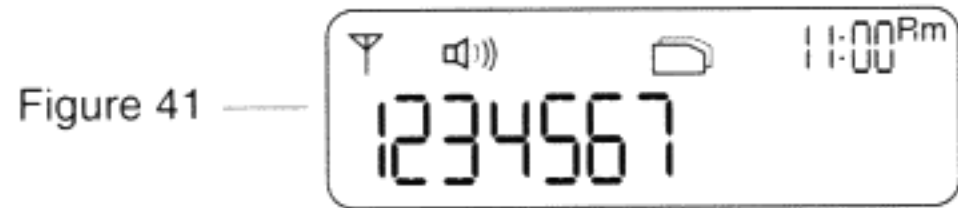
Press the Read button (), the screen displays the continued message.

Figure 40

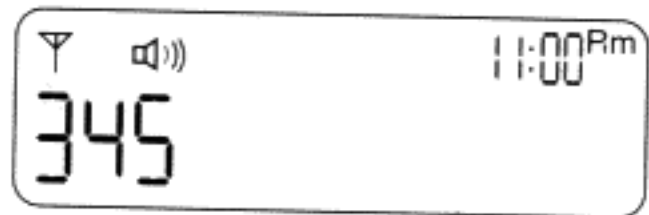



2. Duplicated Message Indicator



If there is any duplicated message, the indicator () is displayed on the LCD.



3. Read Received Message


When a message is arrived, the pager either vibrate or beeps and the message is displayed on the LCD. To read message, press the Set button () or the Read button ().


4. Read stored Message

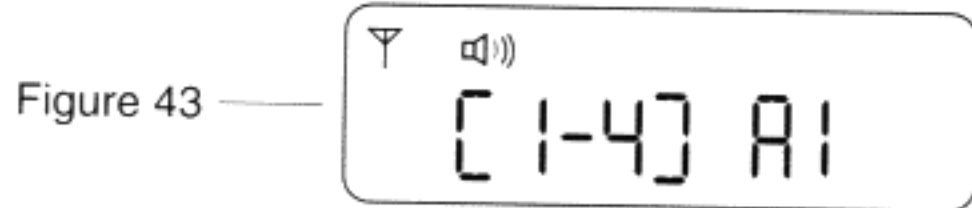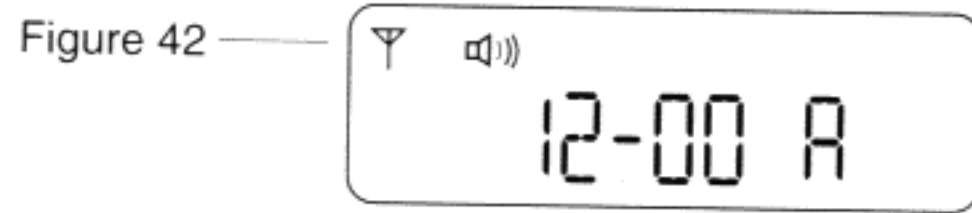

The left figure inside the brackets shows the first message and the right figure inside the brackets shows the number of the message received.

Figure 44

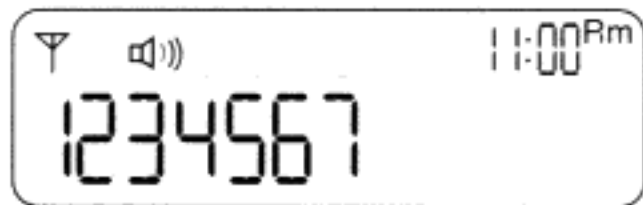

To read message continuously, press the Read button () repeatedly. The all received message displayed in sequence.

5. Unread Message

If there is any message that has not been read, the screen displays as shown figure 45.

Figure 45

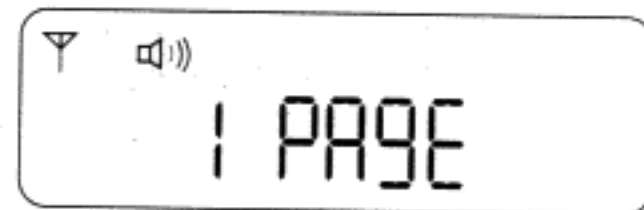


Figure 46

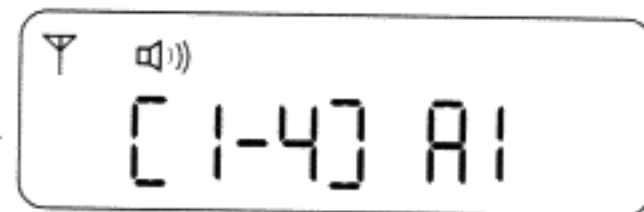


Figure 47


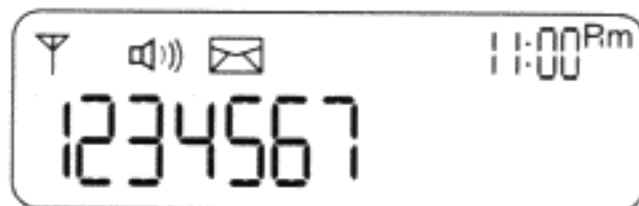


Figure 48

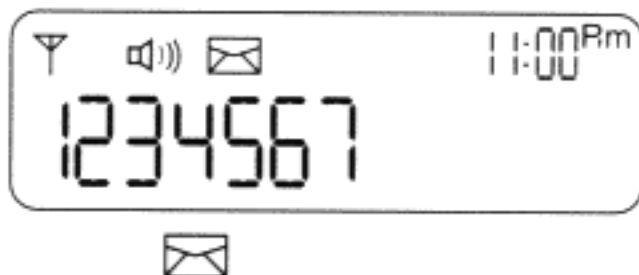

6. Message Storage

The maximum number of message that can be stored is 16. When the message is full, a new message is overwritten the oldest message.